

Viking Unit Test CATS


Startup Procedure




CAUTIONS

DO NOT perform this Startup Procedure on a workstation that has never been powered up before. The System Administrator must startup new stations.


Ensure that all components are connected before performing this Startup Procedure.

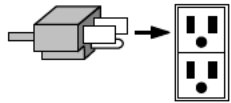

1 Plug in the main power source for the tester.

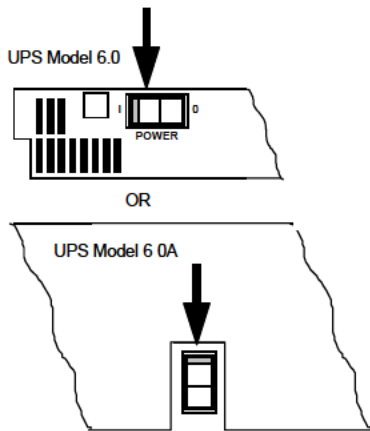


2 Power on the UPS Main Power Switch with the switch at the rear of the UPS.

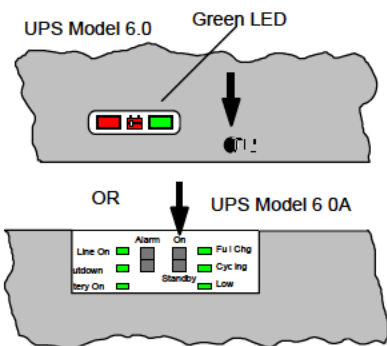


3 Switch the UPS from STANDBY to ON with the switch on the front of the UPS. Use a screwdriver on the Model 6.0 to hold the switch down until you hear a beep and the green LED lights. The UPS will take a few seconds to power up the Sun CPU. The CPU beeps after power up.

4 Power on the monitor with


the switch on the front of the monitor.

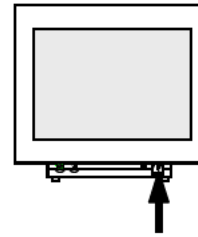

5 Power on the HP 3488A Switch/Control Unit with the switch on the front of the 3488.

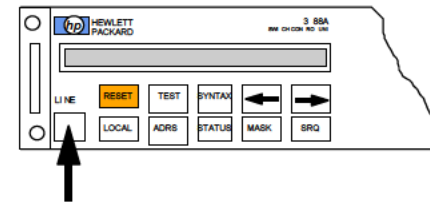

switch in to

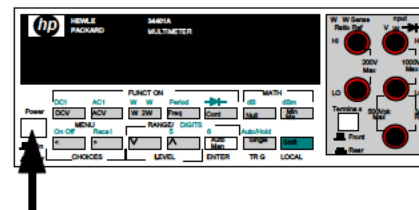

6 Power on the HP 34401A Digital Multimeter with the switch on the front of the 34401. Press the "Terminals"

select "Rear".
7 Wait for Login: prompt to appear on the monitor.

NOTES

See the "Viking Unit Test Owner's Technical Reference Manual" and the schematics for details on hardware connections.

See the "Viking Unit Test Owner's Technical Reference Manual" and the "CATS Operator's Guide" for details on software operation.

 
See the System Administrator (x38220) if the OK> prompt does not appear, if the CPU doesn't beep on power up, or if you have questions regarding logging in, logging out, or passwords.

Viking Unit Test CATS


Shutdown Procedure

1 In any "vikop" window, type:
`sudo init 0`


2 At the Password: prompt, type:
<your password>

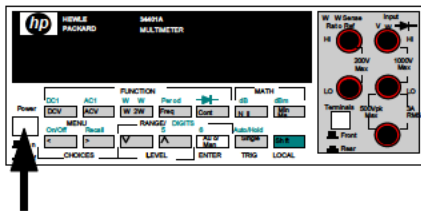

 
3 When the the OK> prompt appears on the monitor, power off the HP 34401A Digital Multimeter with the switch on the front of the 34401.

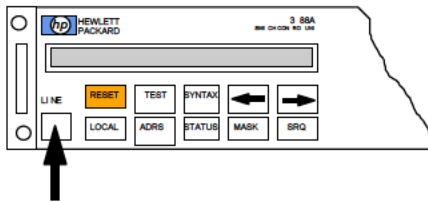


4 Power off the HP 3488A Switch/Control Unit with the switch on the front of the 3488.

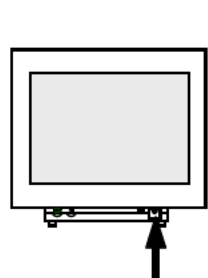


5 Power off the monitor with the switch on the front of the monitor.

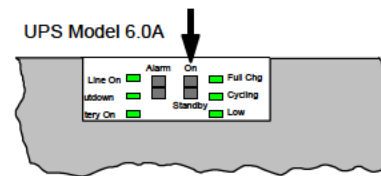

6 On the UPS Model 6.0A, switch the UPS from ON to STANDBY with the switch on the front of the UPS.

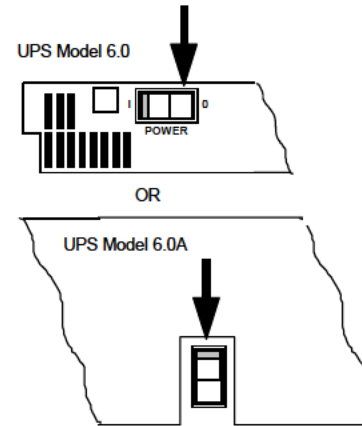

7 Power off the UPS Main Power Switch with the switch at the rear of the UPS.

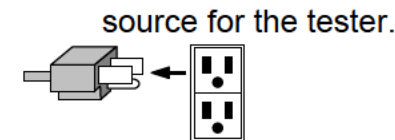

8 Unplug the main power

NOTES

See the "Viking Unit Test Owner's Technical Reference Manual" and the schematics for details on hardware connections.

See the "Viking Unit Test Owner's Technical Reference Manual" and the "CATS Operator's Guide" for details on software operation.

See the System Administrator (x38220) if the OK> prompt does not appear, or if you have questions regarding logging in, logging out, or passwords.