

3.2 Configure the Vib Pro

This section describes how to set the Vib Pro jumpers, connect the Vib Pro to the SIU, and configure the Vib Pro for use with the Product.

To configure the Pelton Vib Pro:

- 1 Check prerequisites:
 - ✓ The central recording system computer is installed
 - ✓ The Product software is running
 - ✓ The Vib Pro is powered down
- 2 Open the back of the Vib Pro and remove the interface card. Use proper anti-static precautions. Refer to the Pelton documentation as necessary.

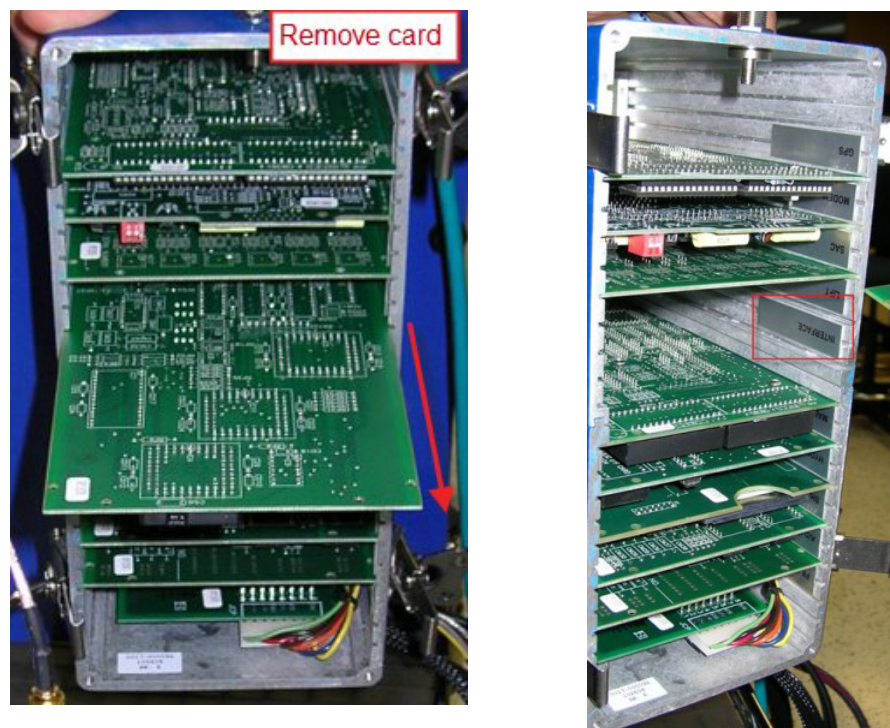


Figure 3–3 Pelton Vib Pro Interface Card in Slot

3. Connecting the Vib Pro

Configure the Vib Pro

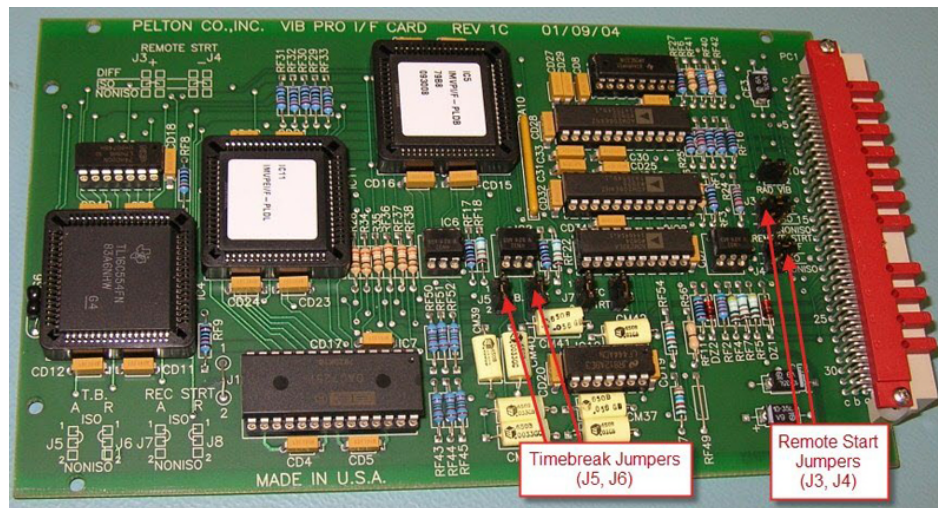


Figure 3-4 Pelton Vib Pro Interface Card

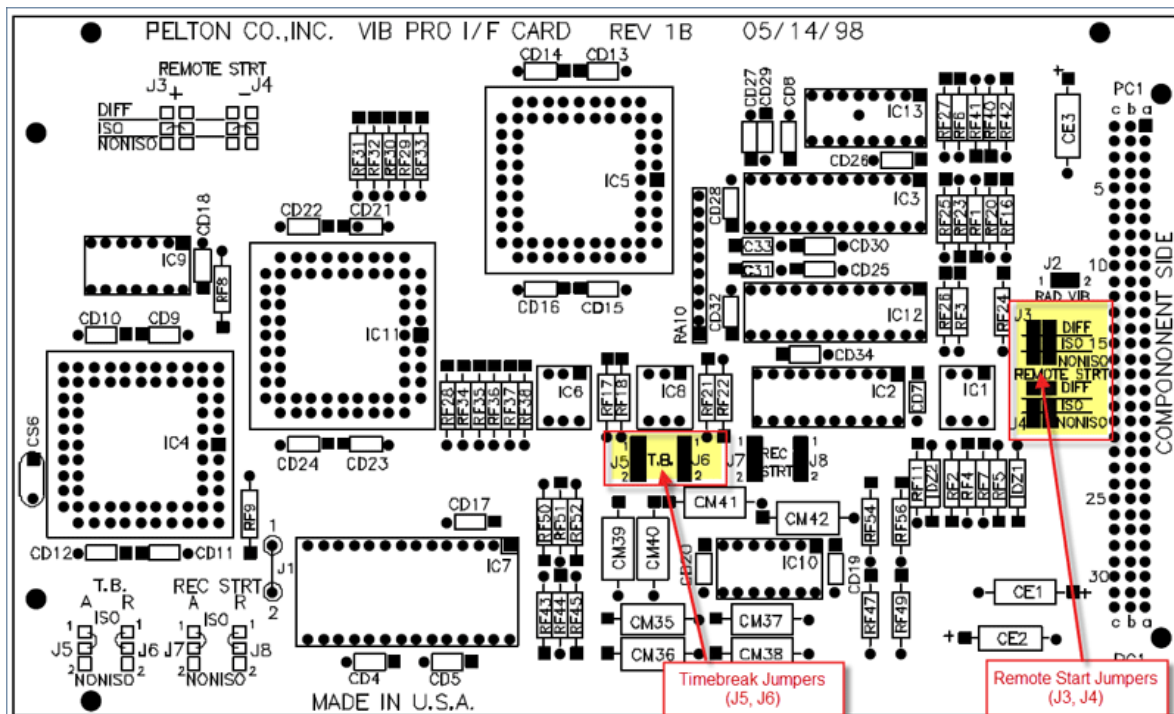


Figure 3-5 Pelton Vib Pro Interface Card Assembly Drawing

- 3 Connect the **Timebreak** and **Remote Start** jumpers as shown in the following figure:

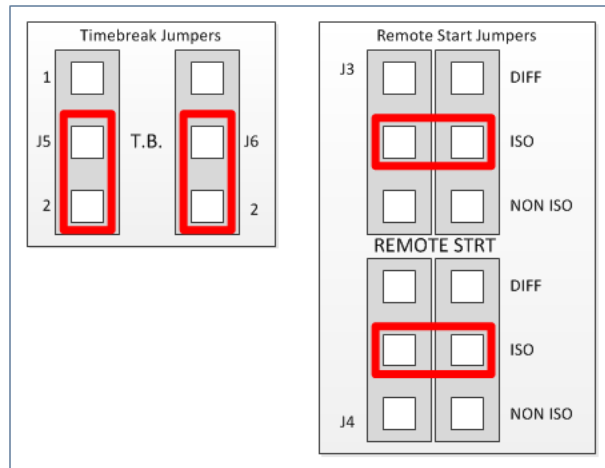


Figure 3–6 Pelton Vib Pro Jumpers

- 4 Slide the interface card into the Pelton Vib Pro and close the case.
- 5 Connect the Vib Pro cables to the Productas shown in the following figure. For cable details, see *"Vib Pro Source Interface Cables and Connectors"* on page 32.
- 6 Power on the Pelton Vib Pro.